
## HOMELITE


INSTRUCTIONS & PARTS LIST

42" GRADER BLADE No. LM-991013 for T-10, T-12, T-15,


T-16H, & T-16S TRACTORS

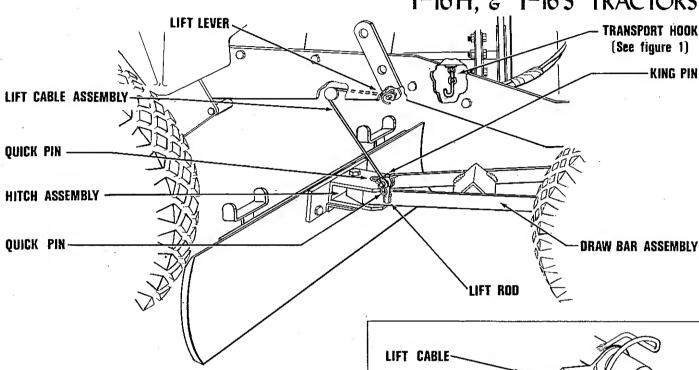

The 42" grader blade is attached to the tractor as shown in the above illustration by following the sequence of steps as outlined below.

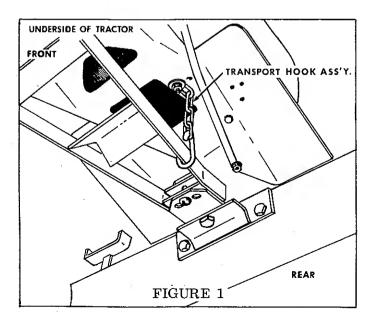


1. Position the grader blade under the tractor so that the draw bar assembly may be connected to the front hitch brackets of the tractor. Secure in place with two clevis pins and two quick pins.

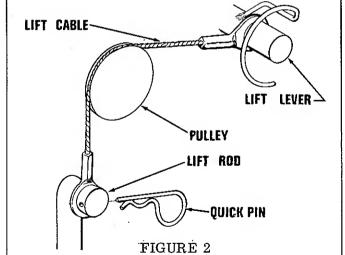

- 2. Attach the lift cable to the rod on the lift lever located on the underside of the tractor (see Fig. 2). Run the cable over the pulley and attach to the lift rod on the draw bar. Secure with a quick pin.
- 3. When desired, the blade may be angled to the left or right by removing the king pin and quick pin from the center hole in the hitch assembly. Lock the blade in the desired position by replacing the king pin and quick pin when the alternate holes in the hitch assembly line up with the hole in the draw bar.

PART NO. 24696-4 Supersedes No. 24696

## 42" GRADER BLADE

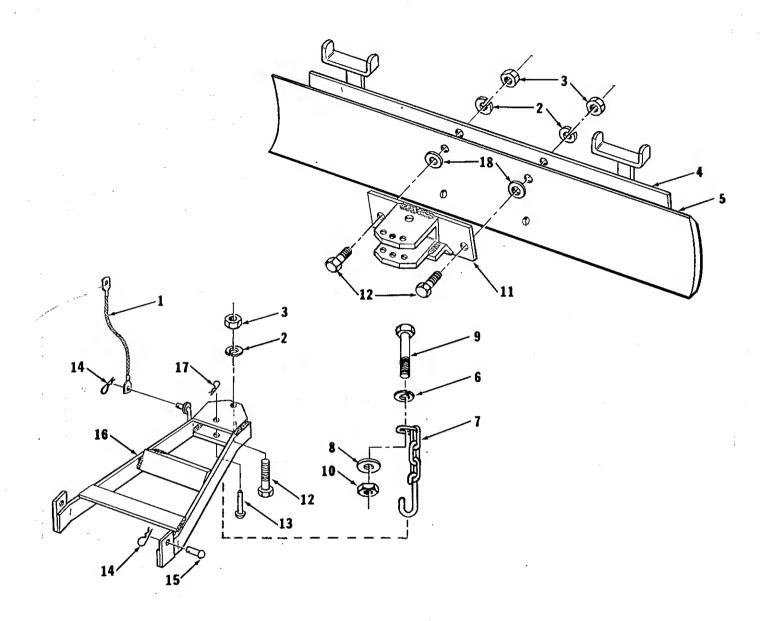

No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	CABLE ASSEMBLY-lift	LM-16064-73	1	11	HITCH ASSEMBLY	LM-01070-58	1
2	WASHER-lock, 5/8	LM-09173-73	3	12	SCREW-hex cap, 5/8-111 x 3	LM-09221-18	3
3	NUT-hex, 5/8-11	LM-09157-26	3	13	PIN-king	LM-81810-08	1
4	BRACKET ASSEMBLY	LM-01727-38	1	14	PIN-quick	LM-01067-88	3
5	BLADE-grader, 42"	LM-01070-56	1	15	PIN	LM-01180-53	2
- 6	WASHER-lock, 3/8	LM-09169-65	1	*16	DRAW BAR ASSEMBLY	LM-01070-62	1
* 7	HOOK-transport lift	LM-01779-73	1	17	PIN-quick	LM-80210-24	1
8	WASHER-flat, 3/8	LM-09173-78	1	18	WASHER	LM-01212-10	2
. 9	SCREW-hex cap, 3/8-16 x 1-1/4	LM-09174-00	1				
10	NUT-hex, 3/8-16	LM-09234-28	1		Accessory		
				PAINT-black, 12 oz. spráy can	22772		

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

